

Description

The AZBH6A8 PWM servo drive is designed to drive brushless and brushed DC motors at a high switching frequency. To increase system reliability and to reduce cabling costs, the drive is designed for direct integration into your PCB. The AZBH6A8 is fully protected against over-voltage, over-current, overheating, invalid commutation, and short-circuits. A single digital output indicates operating status. The drive interfaces with digital controllers that have analog ±10V output. The AZBH6A8 can utilize Hall Sensor feedback for velocity control. This servo drive requires only a single unregulated isolated DC power supply, and is fully RoHS II (Reduction of Hazardous Substances) compliant.

See Part Numbering Information on last page of datasheet for additional ordering options.

Power Range	
Peak Current	6 A
Continuous Current	3 A
Supply Voltage	20 - 80 VDC



Features

- ▲ Four Quadrant Regenerative Operation
- ▲ Direct Board-to-Board Integration
- ▲ Lightweight
- High Performance Thermal Dissipation
- ▲ Differential Input Command

- Digital Fault Output Monitor
- Hall Velocity Mode
- Current Monitor Output
- Compact Size
- High Power Density
- Velocity Monitor Outputs

HARDWARE PROTECTION

- Over-Voltage
- Over-Current
- Over-Temperature
- Short-circuit (phase-phase)
- Short-circuit (phase-ground)

INPUTS/OUTPUTS

- Digital Fault Output
- Digital Inhibit Input
- Analog Current Monitor
- Analog Command Input
- Analog Current Reference

COMMUTATION

Trapezoidal

FEEDBACK SUPPORTED

- Hall Sensors
- Tachometer (± 60 VDC)

MODES OF OPERATION

- Current
- Duty Cycle (Open Loop)
- Hall Velocity
- Tachometer Velocity

MOTORS SUPPORTED

- Three Phase (Brushless)
- Single Phase (Brushed, Voice Coil, Inductive Load)

COMMAND SOURCE


■ ±10 V Analog

COMPLIANCES & AGENCY APPROVALS

- CE Class A (LVD)
- CE Class A (EMC)
- RoHS II



BLOCK DIAGRAM

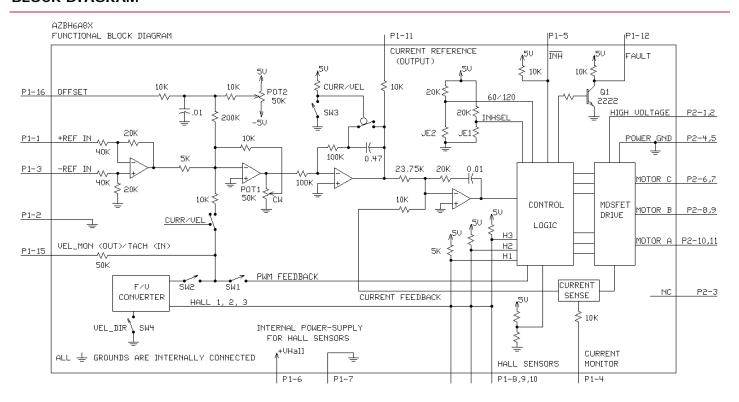

Information on Approvals and Compliances



Compliant with European EMC Directive 2004/108/EC on Electromagnetic Compatibility (specifically EN 61000-6-4:2007 for Emissions, Class A and EN 61000-6-2:2005 for Immunity, Performance Criteria A). LVD requirements of Directive 2006/95/EC (specifically, EN 60204-1:2004, a Low Voltage Directive to protect users from electrical shock).



The RoHS II Directive 2011/65/EU restricts the use of certain substances including lead, mercury, cadmium, hexavalent chromium and halogenated flame retardants PBB and PBDE in electronic equipment.



SPECIFICATIONS

	Power Sp	pecifications
Description	Units	Value
DC Supply Voltage Range	VDC	20 - 80
DC Bus Over Voltage Limit	VDC	88
DC Bus Under Voltage Limit	VDC	18
Maximum Peak Output Current ¹	A	6
Maximum Continuous Output Current	A	3
Maximum Continuous Output Power	W	228
Maximum Power Dissipation at Continuous Current	W	12
Minimum Load Inductance (Line-To-Line) ²	μH	100
Internal Bus Capacitance ³	μF	33
Low Voltage Supply Outputs	-	+6 VDC (30 mA)
Switching Frequency	kHz	31
Control Specifications		
Description	Units	Value
	0	
Command Sources	-	±10 V Analog
Command Sources Feedback Supported	-	±10 V Analog Halls, Tachometer (± 60 VDC)
		8
Feedback Supported	-	Halls, Tachometer (± 60 VDC)
Feedback Supported Commutation Methods	-	Halls, Tachometer (± 60 VDC) Trapezoidal
Feedback Supported Commutation Methods Modes of Operation	-	Halls, Tachometer (± 60 VDC) Trapezoidal Current, Hall Velocity, Duty Cycle, Tachometer Velocity
Feedback Supported Commutation Methods Modes of Operation Motors Supported	- - - - -	Halls, Tachometer (± 60 VDC) Trapezoidal Current, Hall Velocity, Duty Cycle, Tachometer Velocity Three Phase (Brushless), Single Phase (Brushed, Voice Coil, Inductive Load) Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage,
Feedback Supported Commutation Methods Modes of Operation Motors Supported	- - - - -	Halls, Tachometer (± 60 VDC) Trapezoidal Current, Hall Velocity, Duty Cycle, Tachometer Velocity Three Phase (Brushless), Single Phase (Brushed, Voice Coil, Inductive Load) Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage, Short Circuit (Phase-Phase & Phase-Ground)
Feedback Supported Commutation Methods Modes of Operation Motors Supported Hardware Protection	- - - - - - - Mechanical	Halls, Tachometer (± 60 VDC) Trapezoidal Current, Hall Velocity, Duty Cycle, Tachometer Velocity Three Phase (Brushless), Single Phase (Brushed, Voice Coil, Inductive Load) Invalid Commutation Feedback, Over Current, Over Temperature, Over Voltage, Short Circuit (Phase-Phase & Phase-Ground) Specifications

Description	Units	Value
Agency Approvals	-	CE Class A (EMC), CE Class A (LVD), RoHS II
Size (H x W x D)	mm (in)	63.5 x 50.8 x 16.8 (2.5 x 2 x 0.7)
Weight	g (oz)	86.0 (3.0)
Heatsink (Base) Temperature Range ⁴	°C (°F)	0 - 75 (32 - 167)
Storage Temperature Range	°C (°F)	-40 - 85 (-40 - 185)
Form Factor	-	PCB Mounted
P1 Connector	-	16-pin, 2.54 mm spaced header
P2 Connector	-	11-pin, 2.54 mm spaced header

Notes

- Maximum duration of peak current is \sim 2 seconds. Peak RMS value must not exceed continuous current rating of the drive. Lower inductance is acceptable for bus voltages well below maximum. Use external inductance to meet requirements.
- 2.
- 3. Requires a 100μF/100V electrolytic capacitor near the P2 Power Connector between High Voltage and Power Ground pins.
- Additional cooling and/or heatsink may be required to achieve rated performance.



PIN FUNCTIONS

P1 - Signal Connector			
Pin	Name	Description / Notes	1/0
1	+REF IN	Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)	I
2	SIGNAL GND	Signal Ground	GND
3	-REF IN	Differential Reference Input (±10 V Operating Range, ±15 V Maximum Input)	I
4	CURRENT MONITOR	Current Monitor. Analog output signal proportional to the actual current output. Scaling is 2 A/V. Measure relative to signal ground.	0
5	INHIBIT IN	TTL level (+5 V) inhibit/enable input. Leave open to enable drive. Pull to ground to inhibit drive. Inhibit turns off all power devices.	I
6	+V HALL OUT	Low Power Supply For Hall Sensors (+6 V @ 30 mA). Referenced to signal ground. Short circuit protected.	0
7	SIGNAL GND	Signal Ground	GND
8	HALL 1		- 1
9	HALL 2*	Single-ended Hall/Commutation Sensor Inputs (+5 V logic level)	- 1
10	HALL 3		
11	CURRENT REFERENCE	Measures the command signal to the internal current-loop. This pin has a maximum output of ±7.32 V when the drive outputs maximum peak current. Measure relative to signal ground.	0
12	FAULT OUT	TTL level (+5 V) output becomes high when power devices are disabled due to at least one of the following conditions: inhibit, invalid Hall state, output short circuit, over voltage, over temperature, power-up reset.	0
13	NC	Not Connected (Reserved)	-
14	NC	Ivot Connected (Keserved)	-
15	VEL MONITOR OUT / TACH IN	Velocity Monitor (±10 V range). Analog output proportional to motor speed. In Hall Velocity mode, output is proportional to the electrical cycle frequency. Hall Velocity scaling is 100 Hz/V. For Tachometer Velocity mode, feedback voltage range is ± 60 VDC max.	O/I
16	OFFSET	Connection to external resistance for command offset adjustments. Apply a ±VDC (10V Max) signal through an external potentiometer into this pin to offset the input gain.	I

	P2 - Power Connector			
Pin	Name	Description / Notes	1/0	
1	HIGH VOLTAGE	DC Power Input. 3A Continuous Current Rating Per Pin. Requires a 100 μ F / 100 V	I	
2	HIGH VOLTAGE	external electrolytic capacitor connected as close as possible to pins between High Voltage and Power Ground.	I	
3	NC (KEY)	Key: No Connection (pin removed)	-	
4	PWR GND	Power Crowned (Common With Signal Crowned) 2A Continuous Current Boting Box Bin		
5	PWR GND	Power Ground (Common With Signal Ground). 3A Continuous Current Rating Per Pin	GND	
6	MOTOR C		0	
7	MOTOR C		0	
8	MOTOR B	Motor Phase Outputs. Current output distributed equally across 2 pins per motor phase, 3A	0	
9	MOTOR B	continuous current carrying capacity per pin.	0	
10	MOTOR A		0	
11	MOTOR A		0	

^{*}For use with Single Phase (Brushed) motors, ground Hall 2 and only connect motor leads to Motor A and Motor B.



HARDWARE SETTINGS

Switch Functions

The DIP Switch bank is located on the underside of the drive PCB. The ON setting is labeled on the switch housing. Setting switches towards the P2 Power Connector is the ON position. Setting switches towards the P1 Signal Connector is the OFF position. The tables below describe switch functionality.

Switch	Description	Setting	
SWITCH	Description	On	Off
1	Duty Cycle mode selector. Activates internal PWM feedback.	Duty Cycle mode	Other modes
2	Activate velocity feedback or monitor. For Hall Velocity mode, activates feedback. For Current mode, activates velocity monitor.	Active	Inactive
3	Current mode selector.	Current mode	Other modes
4	Velocity feedback polarity. Changes the polarity of the internal feedback signal and the velocity monitor output signal. Inversion of the feedback polarity may be required to prevent a motor runaway condition.	Standard	Inverted

Mode Selection Table

	SW1	SW2	SW3
CURRENT	OFF	ON	ON
DUTY CYCLE	ON	OFF	OFF
HALL VELOCITY*	OFF	ON	OFF
TACHOMETER VELOCITY	OFF	OFF	OFF

^{*}NOTE: See details of switch 4 for further Hall Velocity configuration information.

Jumper Settings

Jumpers are SMT, 0 ohm resistors located on the underside of the drive PCB. By default, the drive is configured with the jumpers installed. Typical drive operation will not require the jumpers to be removed. Please contact the factory before jumper removal.

Jumper	Jumper Description		uration
	SMT Jumper (0Ω Resistor)	Not Installed	Installed
JE1	Inhibit logic. Sets the logic level of inhibit pins. Labeled JE1 on the PCB of the drive.	Low Enable	Low Inhibit
JE2	Hall sensor phasing. Selects 120 or 60 degree commutation phasing. Labeled JE2 on the PCB of the drive.	60 degree	120 degree

Potentiometer Functions


Potentiometers are located between the PCB and the drive baseplate, and are accessible from the side. Potentiometers are approximately linear and have 12 active turns with 1 inactive turn on each end.

Potentiometer	Description	Turning CW
1	Loop gain adjustment for duty cycle / velocity modes. Turn this pot fully CCW in current mode. Located closest to the corner of the PCB.	Increases gain
2	Offset. Used to adjust any imbalance in the input signal or in the amplifier. Located furthest from the corner of the PCB.	Adjusts offset in negative direction



MECHANICAL INFORMATION


P1 - Signal Connector		
Connector Information 16-pin, 2.54 mm spaced header		16-pin, 2.54 mm spaced header
Moting Connector	Details Samtec: BCS-116-L-S-PE	
Mating Connector	Included with Drive	No
		15 VEL MONITOR OUT / TACH IN 13 NC 11 CURRENT REFERENCE 9 HALL 2 9 HALL 2 1 NNHIBIT IN 3 - REF IN 1 + REF IN 2 SIGNAL GND 4 CURRENT MONITOR 8 HALL 1 10 HALL 3 11 OHALL 3 16 OFFSET

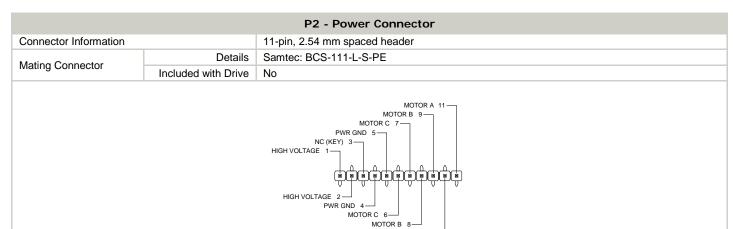

MOTOR A 10-




MOUNTING DIMENSIONS

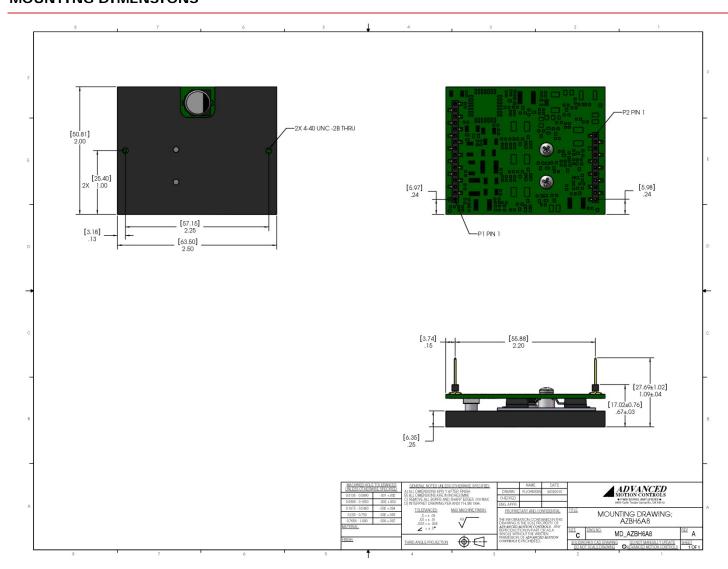



PART NUMBERING INFORMATION

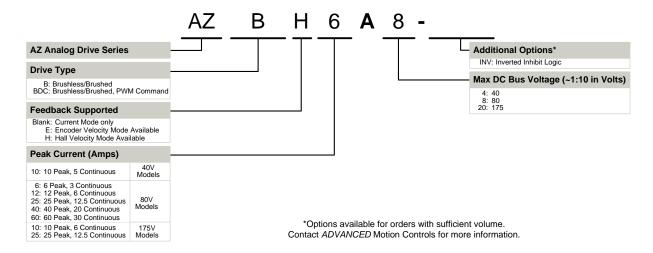

ADVANCED Motion Controls AZ series of servo drives are available in many configurations. Note that not all possible part number combinations are offered as standard drives. All models listed in the selection tables of the website are readily available, standard product offerings.

ADVANCED Motion Controls also has the capability to promptly develop and deliver specified products for OEMs with volume requests. Our Applications and Engineering Departments will work closely with your design team through all stages of development in order to provide the best servo drive solution for your system. Equipped with on-site manufacturing for quick-turn customs capabilities, ADVANCED Motion Controls utilizes our years of engineering and manufacturing expertise to decrease your costs and time-to-market while increasing system quality and reliability.

Examples of Modifications and Customized Products

- ▲ Integration of Drive into Motor Housing
- ▲ Mount OEM PCB onto Drive Without Cables
- ▲ Multi-axis Configuration for Compact System
- Custom PCB and Baseplate for Optimized Footprint
- ▲ RTV/Epoxy Components for High Vibration
- ▲ OEM Specified Connectors for Instant Compatibility
- ▲ OEM Specified Silkscreen for Custom Appearance
- Increased Thermal Limits for High Temp. Operation
- ▲ Integrate OEM Circuitry onto Drive PCB
- Custom Control Loop Tuned to Motor Characteristics

- Optimized Switching Frequency
- ▲ Ramped Velocity Command for Smooth Acceleration
- ▲ Remove Unused Features to Reduce OEM Cost
- ▲ Application Specific Current and Voltage Limits

Feel free to contact Applications Engineering for further information and details.

Available Accessories

ADVANCED Motion Controls offers a variety of accessories designed to facilitate drive integration into a servo system. Visit www.a-m-c.com to see which accessories will assist with your application design and implementation.



All specifications in this document are subject to change without written notice. Actual product may differ from pictures provided in this document.